

# Code Formatting

## UPC/EAN Formatting



\* Transmit UPC-A Check Digit

---



Do Not Transmit UPC-A Check Digit

---



Transmit UPC-E Check Digit

---



\* Do Not Transmit UPC-E Check Digit

---



Expand UPC-E to 12 Digits – Expand UPC-E bar codes to the 12 digit equivalent, UPC-A bar codes.

---



\* Do Not Expand UPC-E to 12 Digits

---



\* Send Number System on Expanded UPC E

---



Do Not Send Number System on Expanded UPC E

---



Enable GTIN Formatting

---



\* Disable GTIN Formatting

---



Convert UPC-A to EAN-13 – The scanner converts UPC-A to EAN-13 by transmitting a leading zero before the bar code.

---



\* Do Not Convert UPC-A to EAN-13



Transmit Lead Zero on UPC-E – This option will transmit a zero before each UPC-E bar code.



Do Not Transmit Lead Zero on UPC-E



Convert EAN-8 to EAN-13 – The scanner will transmit five zeros before the bar code to convert EAN-8 to EAN-13.



\* Do Not Convert EAN-8 to EAN-13



\* Transmit UPC-A Number System



Do Not Transmit UPC-A Number System



\* Transmit UPC-A MFR #



Do Not Transmit UPC-A MFR #



\* Transmit UPC-A ITEM #



Do Not Transmit UPC-A ITEM #



\* Transmit EAN-8 Check Digit



Do Not Transmit EAN-8 Check Digit



\* Transmit EAN-13 Check Digits – The scanner will transmit EAN-13 Check Digit.



Do Not Transmit EAN-13 Check Digit.